

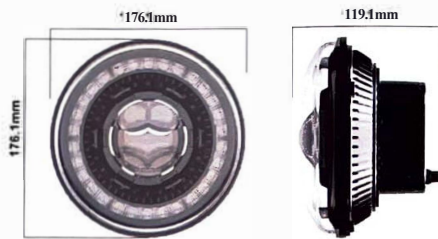


PRODUCT MANUAL


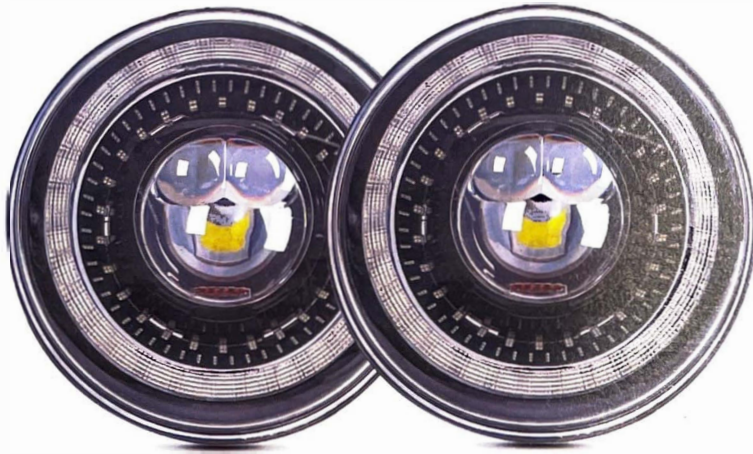


Q: How to get rid of moisture/condensation?

A: Depending on the environment used, there are occasions when your new headlights may accumulate internal condensation. If that happens, remove the ventilation breathers on the back of the headlight assembly and turn the lights on for at least one hour. This will remove all the moisture from inside the headlight assembly. Taking proper care of your headlights will significantly prolong their life.

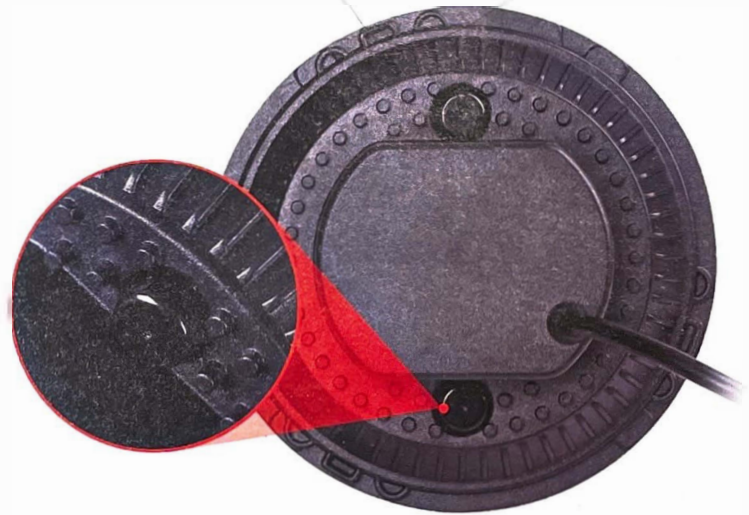

LIGHTING TYPE

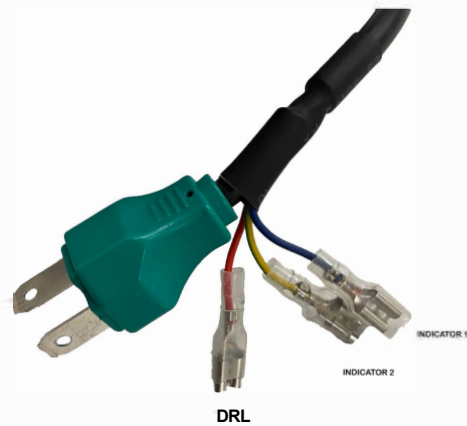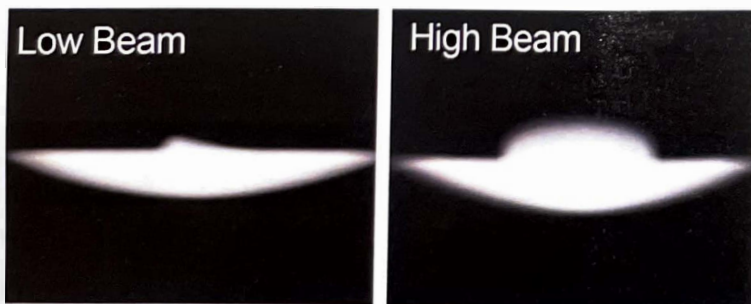

LIGHTING




WIRING INSTRUCTION


INSTALLATION STEPS




1 Please remove the stock daytime running lights housing

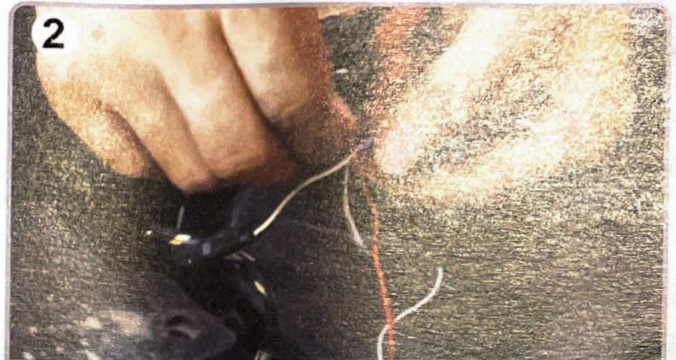

2 Using the extension wire to connect with DRL and new headlights

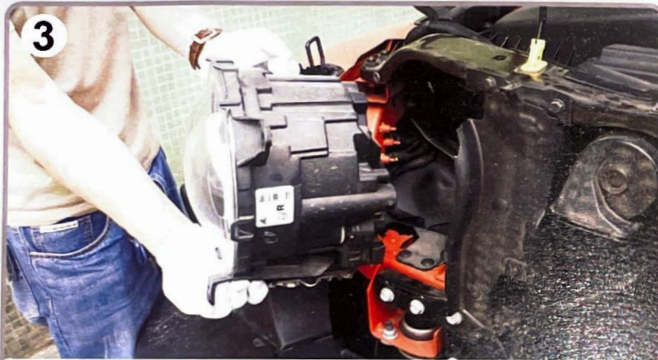

3 Remove 3 screws and stock headlamps

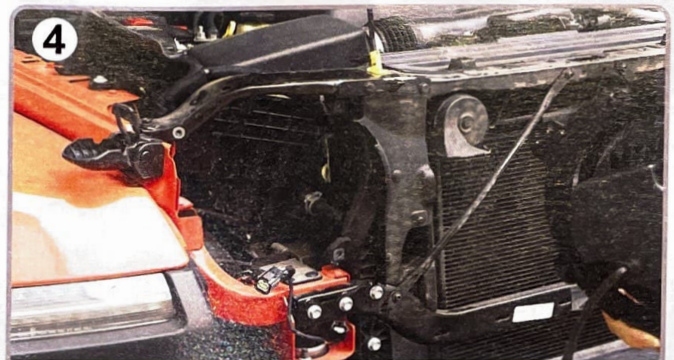

4 Connect the wires and test the light beams



5 Put back the screws and finished the installation



6 Seat back the hood

